

OnCue[®] Plus

QUICK-START GUIDE

**WELCOME TO ONCUE[®] PLUS.
WE'D LIKE TO SHOW YOU AROUND.**

With OnCue Plus remote monitoring, you can manage your generator from anywhere in the world. And this easy guide will show you how to get started.



STEP 1: DOWNLOAD THE APP

First things first: visit the App StoreSM or Google PlayTM, and search “KOHLER® OnCue Plus.” Then download the OnCue Plus app to your mobile device.




Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google Inc.

STEP 2: CREATE AN ACCOUNT OR LOG IN

When you open your app, you'll be asked for a username and password. If you already created an account, you can log in now. If you need to create an account, tap the "Create Account" link. Fill out the information, then we'll send you an email to activate your account. Once your account is activated, log in to the OnCue® Plus app.

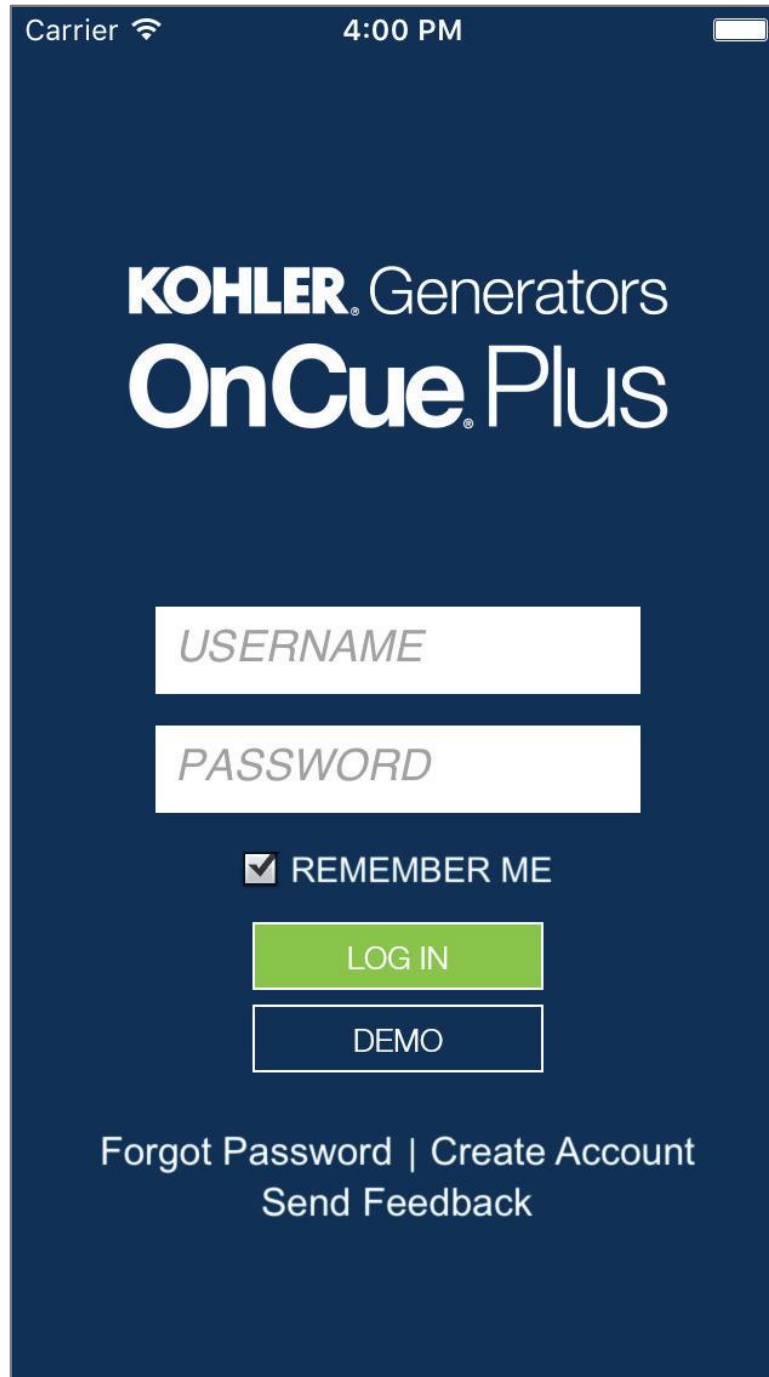


The screenshot shows the login interface of the KOHLER Generators OnCue Plus app. At the top, the status bar displays "Carrier" with a Wi-Fi icon, the time "4:00 PM", and a battery icon. The app title "KOHLER Generators OnCue Plus" is centered in white text. Below the title are two white input fields: the first is labeled "USERNAME" and the second is labeled "PASSWORD". Underneath the password field is a checkbox labeled "REMEMBER ME" which is checked. There are two buttons: a green "LOG IN" button and a white "DEMO" button with a dark border. At the bottom, there are links for "Forgot Password | Create Account" and "Send Feedback".


STEP 3: ADD YOUR GENERATOR

Once you're in the app, the first thing you need to do is add your generator. See below.

First, tap the menu icon in the top left.

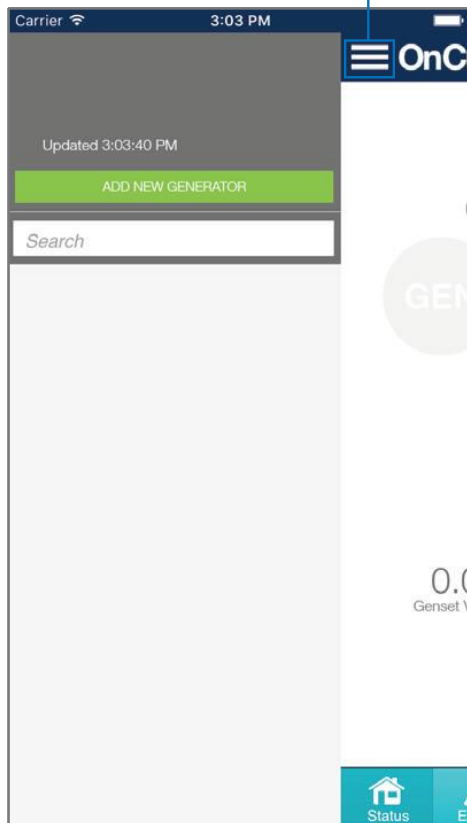


Then tap the "ADD NEW GENERATOR" button, and follow the instructions. You'll need your generator's serial number and OnCue® Plus password.

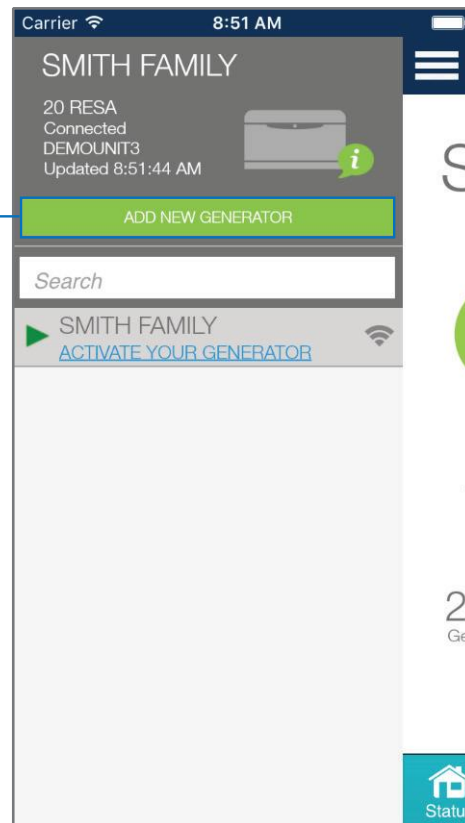


STEP 4: ACTIVATE YOUR GENERATOR

Now that your generator is added, there's only one thing left: activate your generator. Then you're ready to use OnCue Plus.

First, tap the menu icon in the top left.

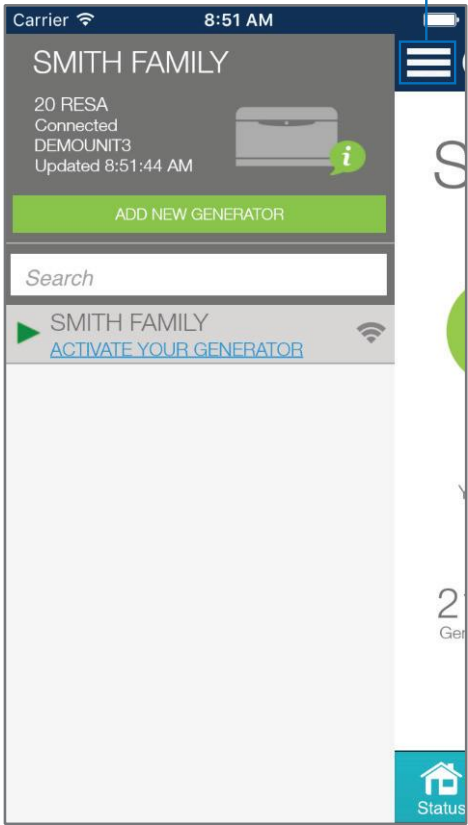

Find your generator, tap the "ACTIVATE YOUR GENERATOR" link and follow the instructions.

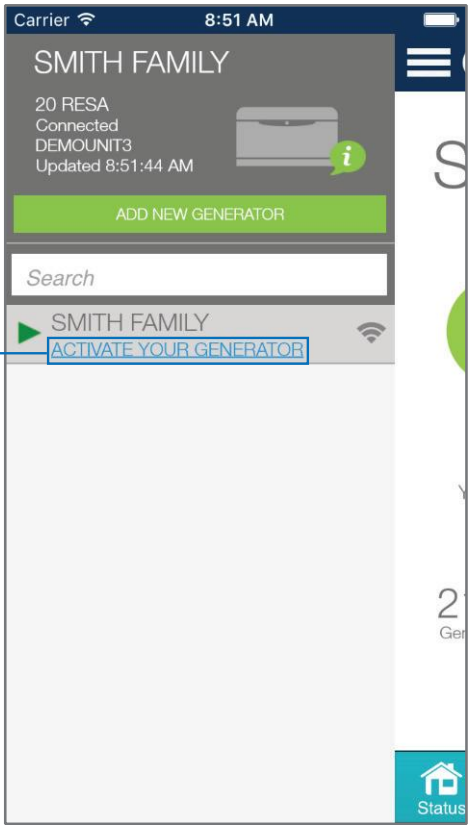



CONGRATULATIONS!

You're ready to start OnCue[®] Plus. Enjoy.

HOW TO USE ONCUE® PLUS.


Along the bottom of your screen is your navigation bar. This is where you'll find everything you need to know about your generator.

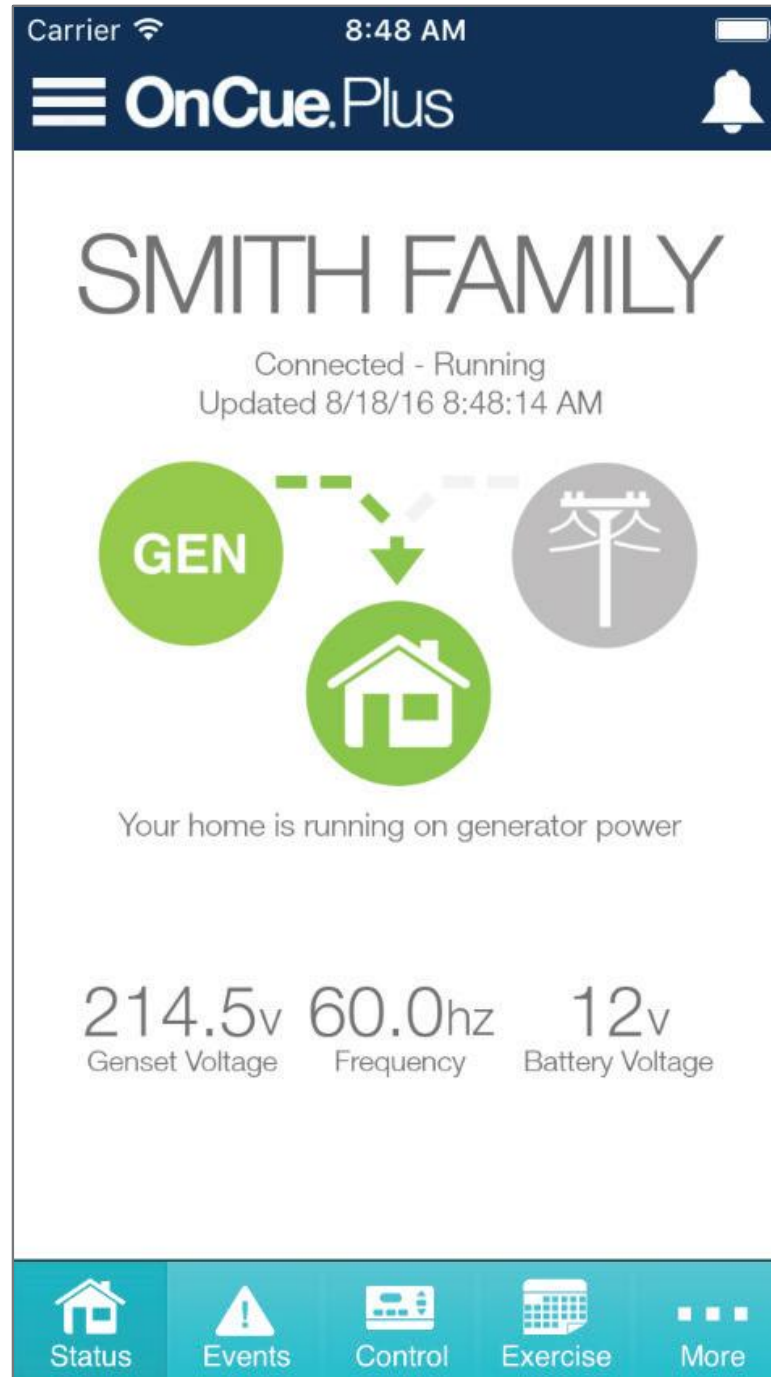

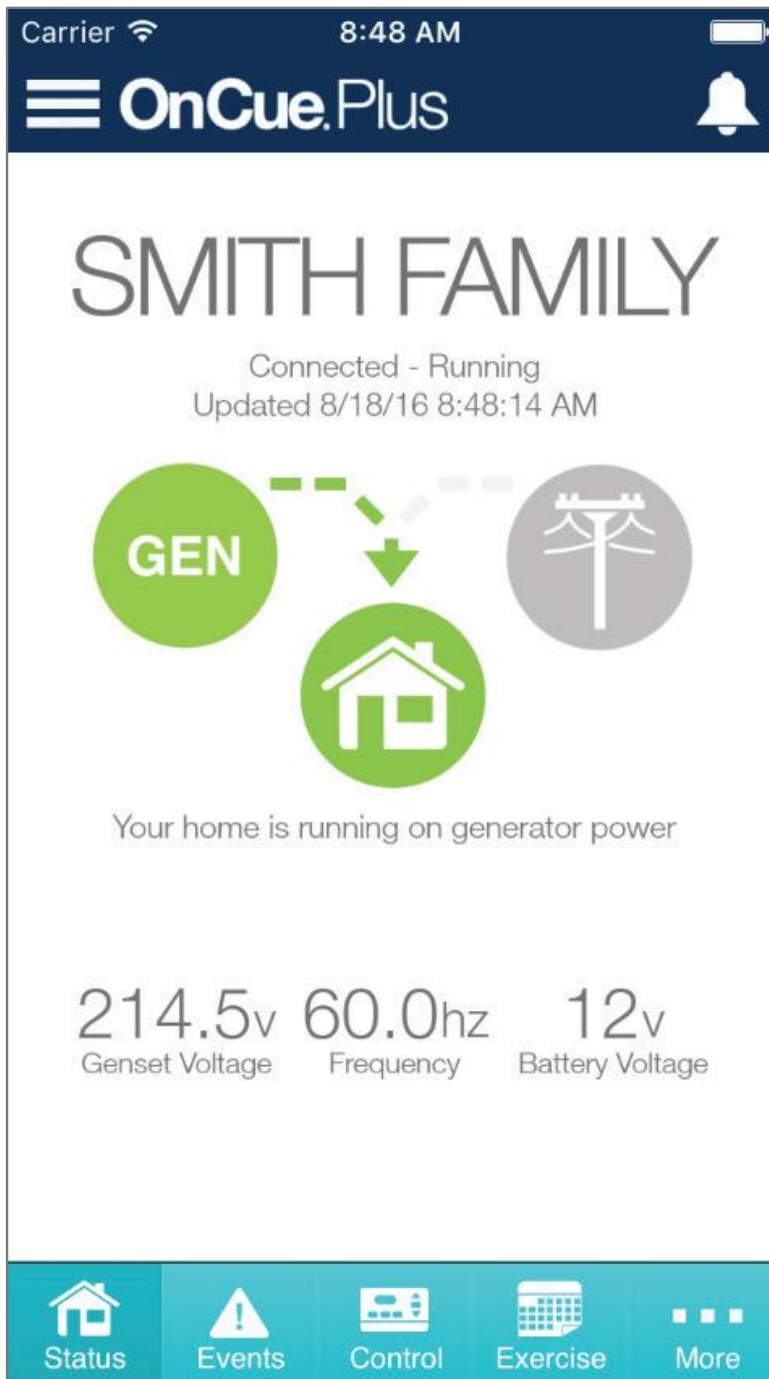

STATUS

Status is the default screen when you open OnCue® Plus. The power icons in the middle of this screen indicate where your power is coming from: the utility or your generator.

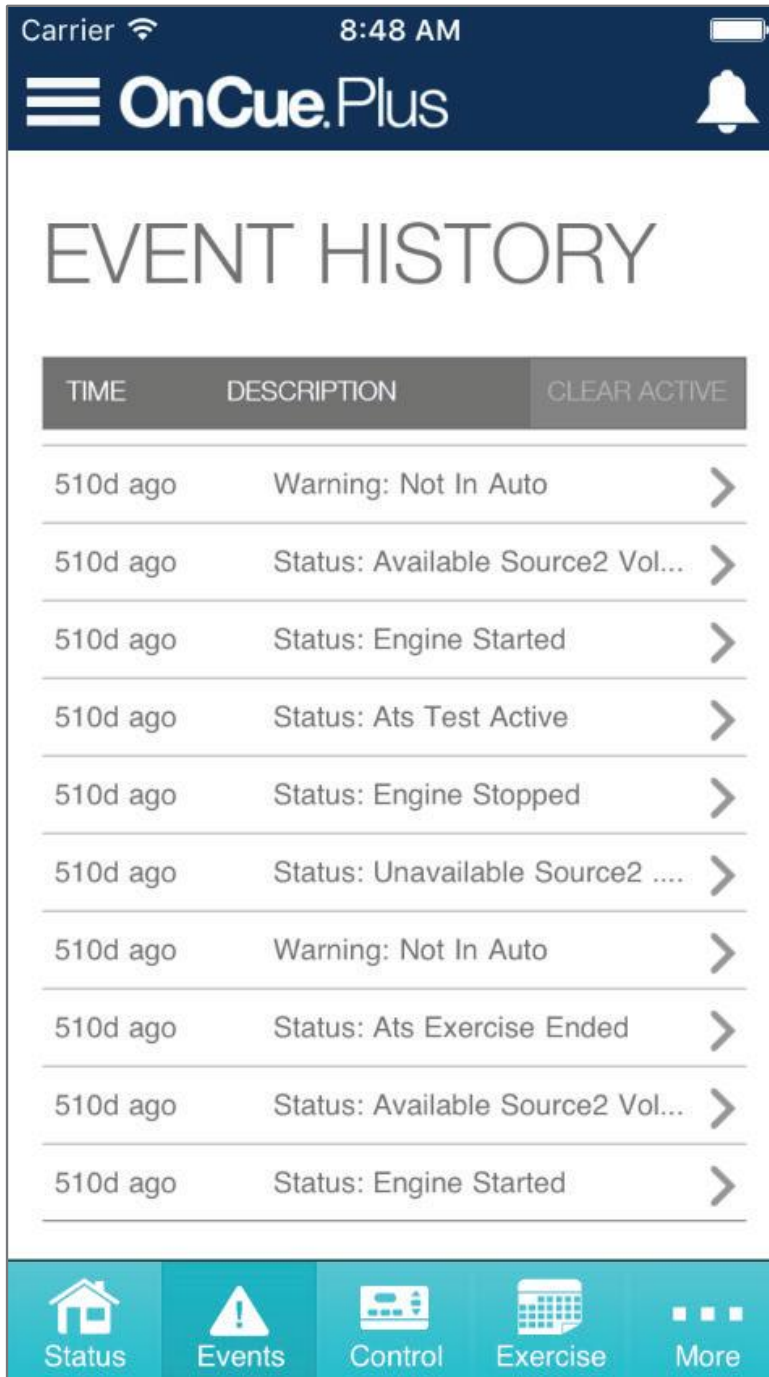

EVENT HISTORY

This page keeps you up-to-date on the health of your generator. It gives you a detailed list of the events the generator experiences including exercises, faults and warnings. Just tap on an event to see its details. OnCue Plus can even send you an email if there's a problem.

Carrier 1:02 PM

OnCue.Plus

CONTROL

START
Exercise

SMITH FAMILY Device Name	3599 RPM
Unloaded Full ... Exercise Type	60.0 Frequency
Not Scheduled Next Exercise	214.5/12V Gen/Battery

PIM		LOAD SHED
1	Digital Output B1 Value	OFF
2	Digital Output B2 Value	OFF
3	Hot Tub	ON
4	Security System	ON
5	Yard Lights	ON
6	Sprinkler System	ON

Status Events Control Exercise More


CONTROL

On the Control page, you can perform additional exercises remotely without affecting your weekly scheduled exercise. Turn on/off specific electronic appliances or rooms (available only when paired with a Programmable Interface Module [PIM]). And watch your generator automatically manage your power (available only with certain generator models).

- Perform additional exercises remotely without affecting your weekly scheduled exercise.

EXERCISE

Here you'll be able to keep track of your generator's exercise schedule to know it's running in top condition. You can manage the exercise interval, run duration and mode, even while you're away.

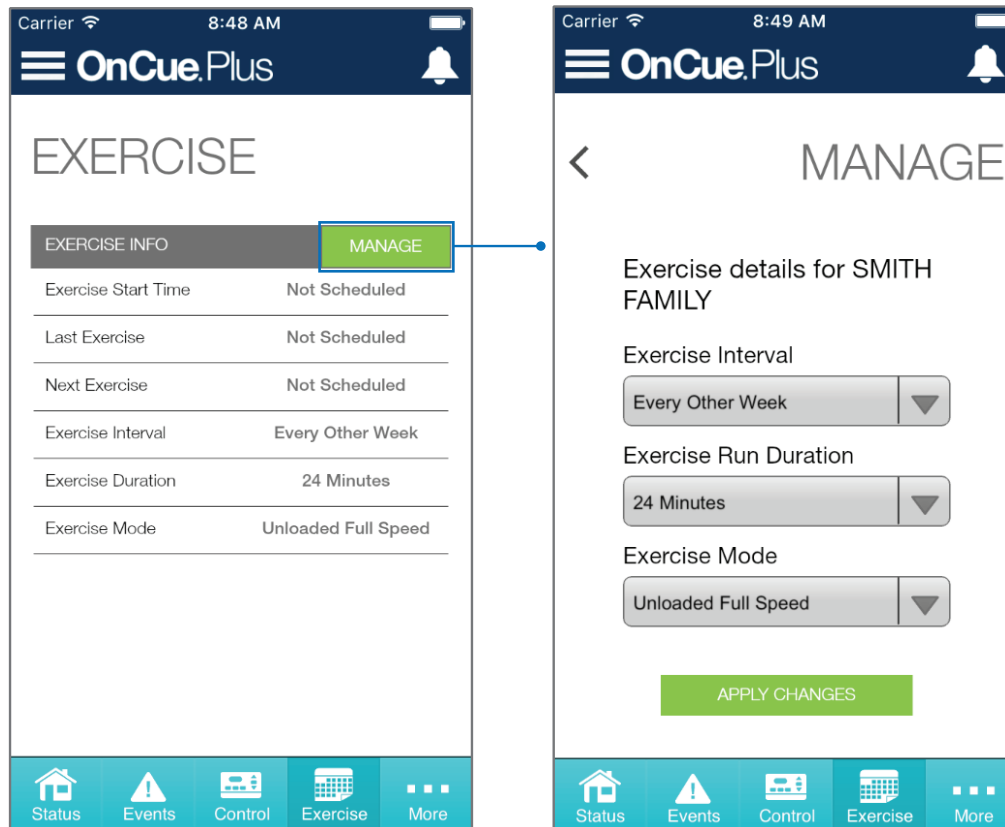

Name	Value
Controller Type	Rdc2
Current Firmware	5.10.0
Current Firmware	6.11.2
Engine Speed	3599 R/min
Engine Oil Pressure	0 Psi
Engine Coolant Temperature	32 °F
Battery Voltage	12 V
Lube Oil Temperature	147.2 °F

PARAMETERS

These pages let you view over 20 generator parameters that offer detailed information such as firmware version number, serial number and power output.

Carrier 8:49 AM

OnCue.Plus

PARAMETERS

Name	Value
Lube Oil Temperature	147.2 °F
Genset Controller Temperatu	104 °F
Engine Compartment Tempe	32 °F
Generator True Total Power	0.0 W
Generator True Percent Of R	0 %
Generator Voltage Average L	214.5 V
Generator Frequency	60.0 Hz
Genset State	Running

Status Events Control Exercise More


Carrier 8:49 AM

OnCue.Plus

PARAMETERS

Name	Value
Genset State	Running
Genset Controller Clock Time	2015-03-26 07:40:
Genset Controller Total Oper	17878.7 h
Engine Total Run Time	321.9 h
IPAddress	/66.84.209.156:31
Connected Server IPAddress	12.31.102.157
Network Connection Establis	True


Status Events Control Exercise More

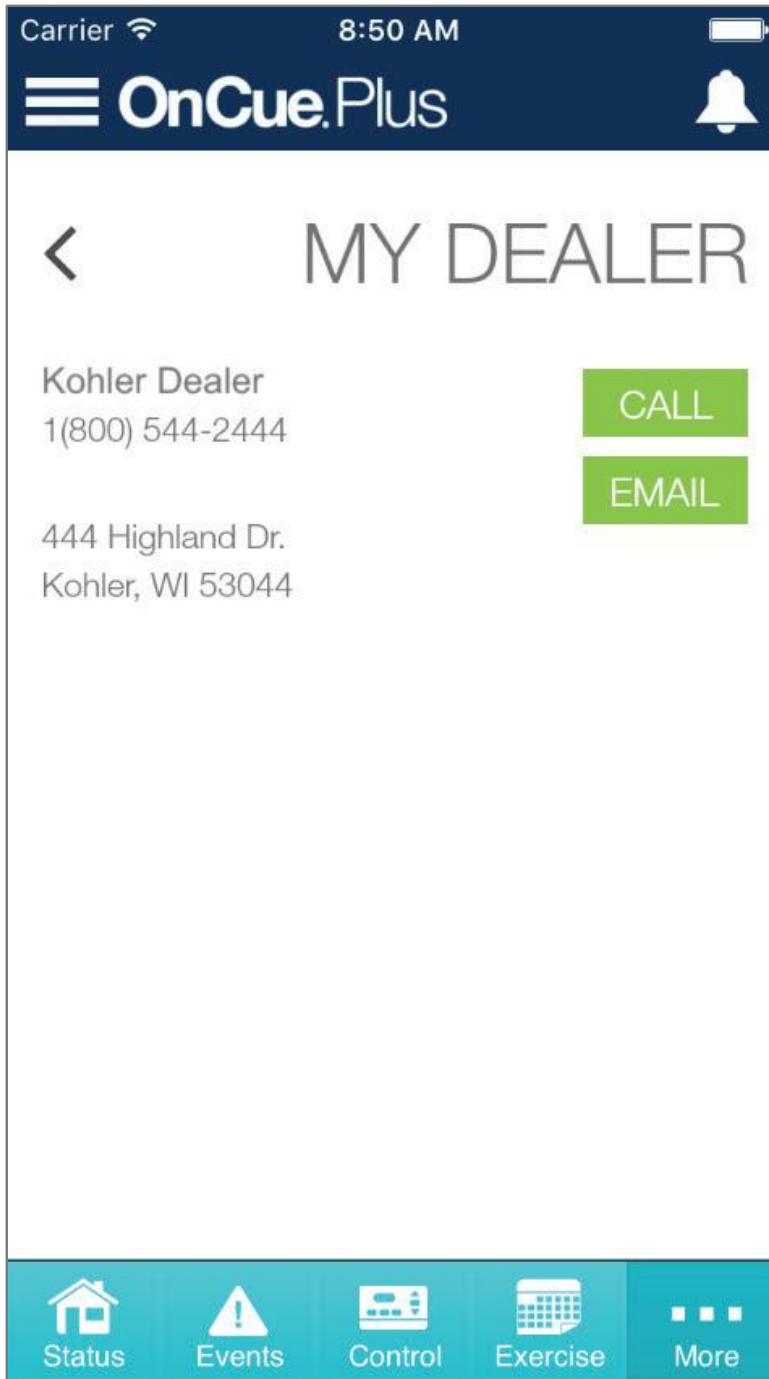

DEALER

Have a question or want to set up a service appointment? Your personal KOHLER dealer is just a tap away.

Your KOHLER dealer will set up this page during the OnCue® Plus installation.

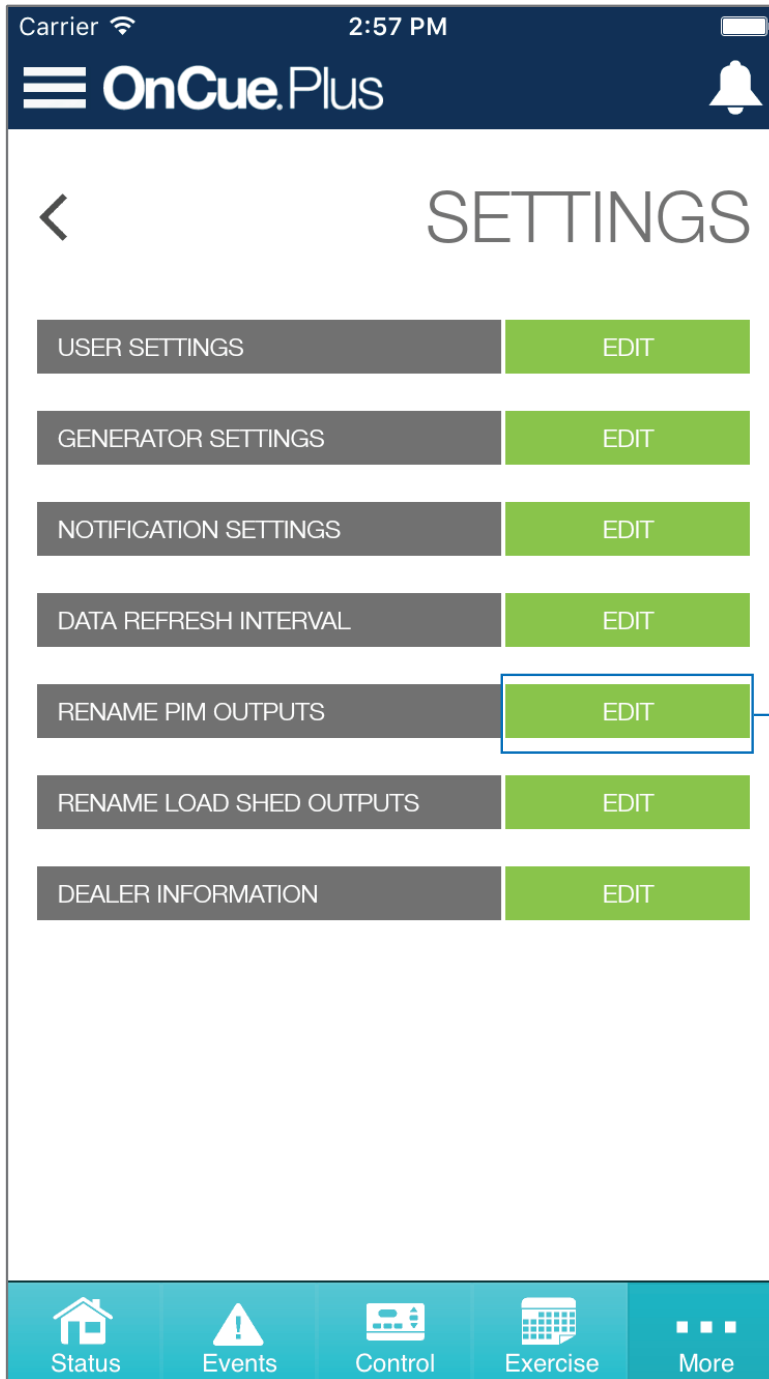

SETTINGS

Manage your email notification list. Change the labels of your power outputs. Edit your generator settings and more. All right here.

Personalize the names of your outputs (available with PIM and/or LCM options).





KOHLER®
IN POWER. SINCE 1920.

KohlerGenerators.com

PRINTED IN U.S.A.

G18-247 11/16

© 2016 KOHLER CO.